

MODEL 35904 - CASCADE

ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT.


NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

To prolong the life of the tent floor, select a level, clean area for the campsite.
To prevent damage to the zipper, unzip the door to allow air to enter the tent.

STEP 1: Spread tent out flat, floor side down. Unzip door.

STEP 2: Extend fiberglass frame sections by pulling out each section and placing it into the metal ferrule.


STEP 3: While making sure sleeves are in line with each other, slide each fiberglass frame pole through the sleeves that are opposite each other on the roof of the tent. Straighten the sleeves along the fiberglass sections. Position poles so that they form an "X" across the tent.

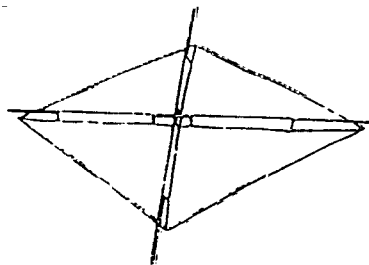

STEP 4: Starting at back corners of the tent, insert pins located at each corner into the ferrules at the ends of the fiberglass frame sections. To raise tent, repeat the same procedure at the front corners. Flexing the fiberglass frame will be necessary.


NOTE: It may be necessary to hold the corner of the tent with the ring and pin in place.

STEP 5: Clip plastic hooks to the fiberglass frame sections.

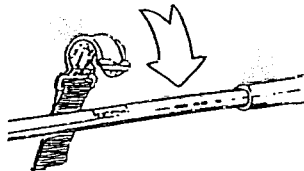


STEP 6: Stake down tent by inserting tent stake through the metal ring at each corner of the tent, hammering into ground by using a hammer or mallet. Make sure to pull tent out even and tight.

Tent should appear as shown.

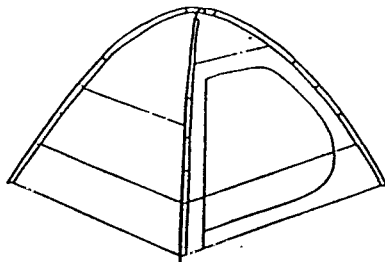


STEP 7: Place ends of the fiberglass fly pole sections into the pole pockets on the fly. Flexing the fiberglass may be necessary.

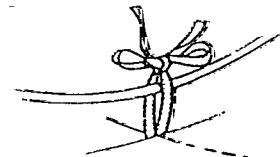

STEP 8: Using the ties in the center of the fly, tie the fly pole into place.

STEP 9: Place fly over tent making sure fly pole is in line with door of the tent and logo is over the door. Attach hooks on the fly to the plastic "D" rings located at each corner of the tent.

Tent should appear as shown.

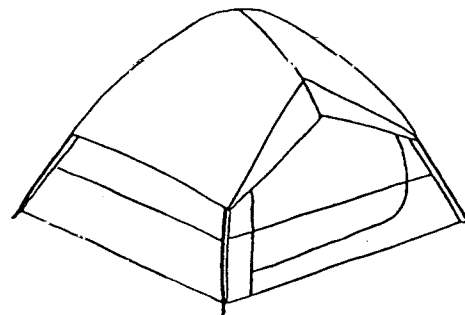

For your convenience, there are hanger loops located inside your tent. These can be used to hang small camping items.

Also, convenience pockets are provided for storing small camping gear.

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place poles into pole bag and stakes into stake bag.

To roll tent up, fold into thirds lengthwise toward the door. At opposite end of the door, start a small, tight roll with poles in pole bag and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Insert into tent carry bag. Make sure tent is clean and dry before storing.

SAFETY AND CARE

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.


Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



REPLACEMENT PARTS

IF YOU HAVE QUESTIONS OR NEED TO ORDER A PART, CALL 1-800-325-TENT. HAVE YOUR MODEL NUMBER AND PART NUMBER READY WHEN YOU CALL. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

SEND YOUR REQUEST FOR PARTS TO: THE WENZEL COMPANY
113 INDUSTRIAL DRIVE
NEW HAVEN, MO 63068

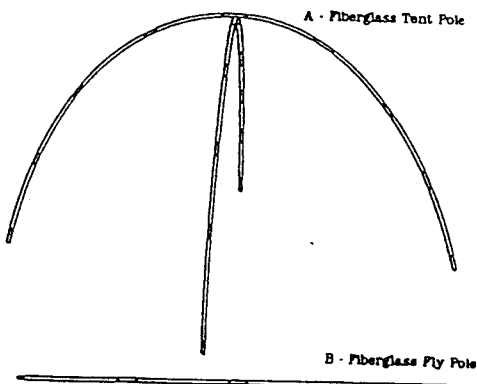

KEY NO.	DESCRIPTION	MODEL NO.	QTY. REQ.
		35904 PART NO.	
A	FIBERGLASS TENT POLE SECTION	97-0005	2
B	FIBERGLASS FLY POLE SECTION	97-0006	1
	COMPLETE FRAME	53581100	1