

# MODEL 35903 - CEDAR CREEK

## ASSEMBLY INSTRUCTIONS

**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT.**


**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**

To prolong the life of the tent floor, select a level, clean area for the campsite.  
To prevent damage to the zipper, unzip the door to allow air to enter the tent.


**STEP 1:** Spread tent out flat, floor side down. Unzip door.

**STEP 2:** Extend fiberglass frame sections by pulling out each section and placing it into the metal ferrule. After assembling, you will have three pole sections.

**STEP 3:** There are six pole sleeves located on the sides of the tent. While making sure sleeves are in line with each other, insert one frame pole section through two of the sleeves that are opposite each other. Repeat this step until all three frame pole sections are in place.

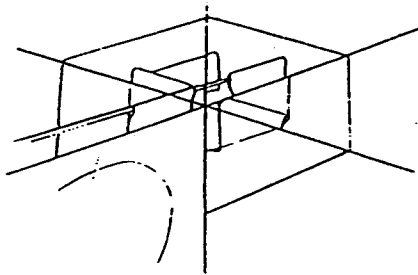


**STEP 4:** Starting at the back corners of the tent, place ends of the fiberglass tent poles into the pole pockets located at each corner of the tent. To raise tent, repeat the same procedure at the front corners, flexing the fiberglass pole into an upward position.

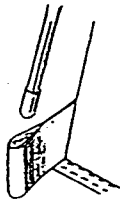

**NOTE:** As poles are raised, make sure metal ferrules do not catch on the sleeves.


**STEP 5:** Stake down tent by inserting tent stake through loop located at each corner of the tent. Hammer stakes into ground at a 45° angle, by using a hammer or mallet. Make sure to pull tent out even and tight.

Tent should appear as shown.

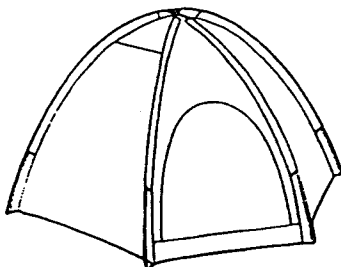


**STEP 6:** Place fly over tent, making sure the door on the fly is in the position as the door on the tent. Attach hooks on fly to loops located at the corners of the tent.

**STEP 7:** Fasten the self-fasteners located at each corner of the fly to the fiberglass frame.

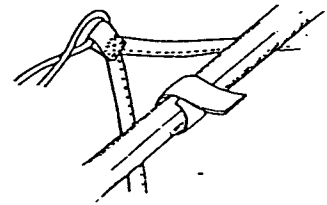

Tent should appear as shown.

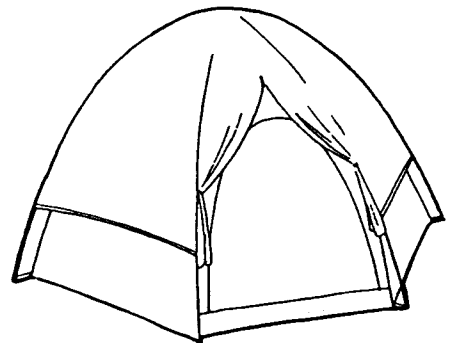

For your convenience, there are hanger loops located inside your tent. These can be used to hang small camping items.

Also, convenience pockets are provided for storing small camping gear.

**NOTE:** To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag, which is provided.

To roll tent up, fold into thirds lengthwise toward the door. Place fly and poles on top of folded tent. At opposite end of the door, start a small, tight roll and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Slide into carry bag. Make sure tent is clean and dry before storing.



