

# MODEL 36071 - ECLIPSE

## ASSEMBLY INSTRUCTIONS

**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT.**


**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**

To prolong the life of the tent floor, select a level, clean area for the campsite.  
To prevent damage to the zipper, unzip the doors to allow air to enter the tent.


**STEP 1:** Spread tent out flat, floor side down.

**STEP 2:** Extend fiberglass frame sections by pulling out each section and placing it into the metal ferrule. You will have six pole sections. The three longest poles (A) are for the main tent room, the next two longest poles (B) are the side room poles. The remaining, shortest pole (C) will be used for the fly.


**STEP 3:** There are six pole sleeves located on the roof of the tent. While making sure sleeves are in line with each other, slide an end of each of the three longest fiberglass poles (A) through the sleeves that are opposite each other. Straighten the sleeves along the fiberglass sections. Position poles so that they cross at the center roof of the tent.

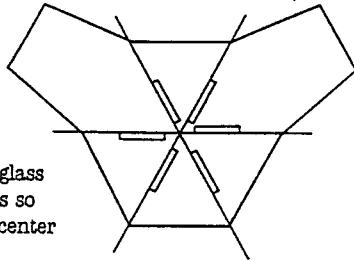

 **STEP 4:** Starting at the rear of the tent, locate the pin and rings at the base of the tent and insert one of the pins into the end of the corresponding pole. You will notice there are two pins attached to the rings at the rear and sides of the tent. One pin is for the main room tent pole and the other pin will be used for the side room pole.



**STEP 5:** One person should now go into the front door of the tent and gently lift the roof of the tent and the poles up off the ground. The other person should carefully flex the main room poles, one at a time, and place the ferrules at the ends of the pole over the metal pins at the base of the tent. Clip plastic hooks to the fiberglass frame sections.

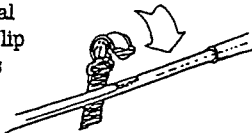


**STEP 6:** Insert stakes through the rings located at each corner of the main tent room. Stake down main room by hammering each stake into the ground at a 45° angle, making certain to pull the main room out tight, so there are no wrinkles in the inside tent floor.

**STEP 7:** To form side rooms, slide the fiberglass side room poles (B) through the sleeves located at the roof of each of the two side rooms. With a person on each end of the side room poles, gently flex the fiberglass and place the pole ends over the remaining pins at the tent base. Clip tent to frame.

**STEP 8:** Stake down the side rooms by inserting tent stakes through the webbing stake loops and hammering stakes into the ground at a 45° angle, making sure the tent rooms are pulled out even and tight.


Tent should appear as shown.

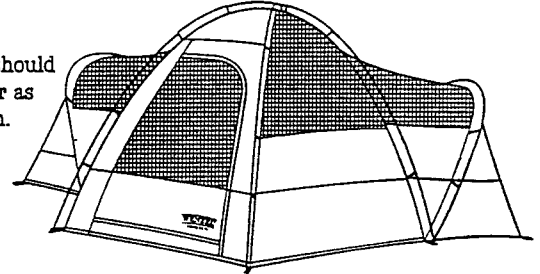

**STEP 9:** Unfold the fly. Place fly over the tent, with the awning above the front door. Attach the hooks on the fly to the loops on the sides of the tent. Fasten the Velcro fasteners, sewn to the edge of the fly, around the fiberglass tent poles.

**STEP 10:** Insert the fly pole (C) into the sleeve at the very edge of the fly awning, over the front door. Flex the fiberglass fly pole and insert each end into the reinforced metal grommets located on either side of the front door.

Tent should appear as shown.

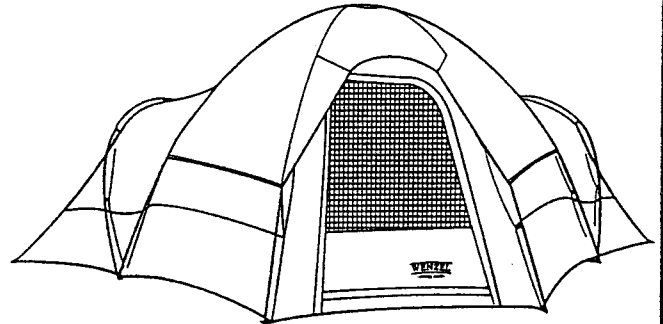

**NOTE:** Divider curtains are included which can be used to divide your tent into separate rooms. Simply attach to the loops located at the ceiling and side walls, inside your tent. Also, convenience pockets are provided for storing small camping gear.

To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the front door. Roll tent toward door to allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing.

# SAFETY AND CARE

## WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

### DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.


Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



## REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-TENT or log into our website at [www.wenzelco.com](http://www.wenzelco.com). Have your model number and part number ready when you call. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

Send your request for parts to: **The Wenzel Company**  
502 Orchard Street  
New Haven, MO 63068

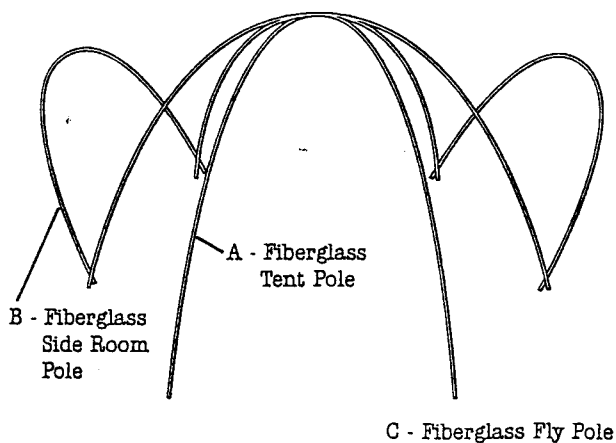

KEY NO.	MODEL NO. 36071		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Tent Pole	97-0031	3
B	Side Room Pole	02-0021	2
C	Fiberglass Fly Pole	02-0013	1
	Complete Frame	53607100	1
	Replacement Fly	36071FLY	1