

# MODEL 36186 - LEGEND

PATENT NO. D478,645

## ASSEMBLY INSTRUCTIONS

**IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SET UP.**

**NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.**


- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, unzip the door, prior to tent set-up, to allow air to enter the tent.
- To improve the weather resistance of your tent, it is advisable to use seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of any local sporting goods store.
- For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

**STEP 1:** Spread tent out flat, floor side down. Unzip door.


**STEP 2:** Extend fiberglass frame poles by pulling out each section and placing it into the metal ferrules. You will have four frame poles. The two poles that are the same length (A) are the main front to rear tent poles. The longest pole (B) is the center pole. The shortest pole with metal, bullet-point end tips (C) is the fly pole.




**STEP 3:** Stake down the front two stake loops, located on the front tent corners, by inserting a tent stake through the stake loops and hammering into the ground at a 45° angle by using a hammer or mallet. Make sure to pull tent front out even and tight.

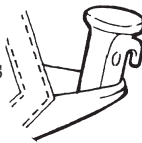

**STEP 4:** While making sure sleeves are in lie with each other slide each of the main, front to rear fiberglass tent pole (A) through the sleeves that are opposite each other on the roof of the tent. Slide the center tent pole (B) through the sleeve that runs across the tent. Straighten the sleeves along the fiberglass poles. Position poles so that they cross at the top of the tent.

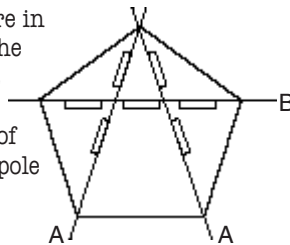

 
**STEP 5:** Starting at the front tent corners, place the ferrule at the end of the main tent pole over the pin at the front tent corners.



**STEP 6:** With one adult holding the front tent pole over the corner pin, the other adult goes to the rear of the tent and flexing the two fiberglass poles into an arch, places the pole ends over the pins at the center base of the tent.

**STEP 7:** With an adult on each end of the center pole, flex the pole into an arch and place the ends over the pins at the center base of the tent.

**STEP 8:** Clip plastic hooks to the fiberglass frame poles.

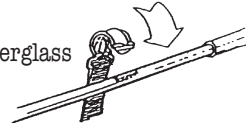

**STEP 9:** Continue to stake down by inserting stakes through the remaining stake loops at the base of the tent and stake to the ground by using a hammer or mallet. Make certain to pull tent out even and tight.

Tent should appear as shown.




**STEP 10:** Unfold the fly.

Place fly over the tent and attach the hooks on the fly to the rings at the base of the tent. Fasten the Velcro fasteners sewn to the edge of the fly around the fiberglass tent poles.

**STEP 11:** Insert the fly pole (C) into the sleeve at the very front edge of the fly, over the front door. Flex the fiberglass fly pole and insert each end into the reinforced metal grommets located on either side of the front door.

**STEP 12:** Guy ropes are provided for your tent fly. Tie a guy rope to each of the loops sewn to the fly over the side windows. Make a loop at opposite end of guy rope by using slider (as shown) and place loop over tent stake. Hammer stake into ground. Adjust slider to make guy rope tight.

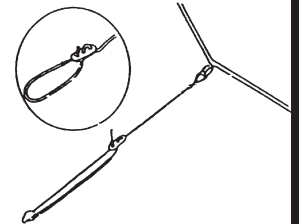

Tent should appear as shown.



**NOTE:** To take down tent, follow steps above in the reverse order. Be sure to leave door and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing.

# SAFETY AND CARE WARNING!

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.**

## ▲ DANGER:

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel-burning devices inside or near this tent.
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

## DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

## DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

**DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY.** THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. UV DAMAGE IS NOT COVERED BY THE MANUFACTURER'S WARRANTY. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.




## REPLACEMENT PARTS

If you have questions or need to order to a part, call 1-800-325-TENT or log into our website at [www.wenzelco.com](http://www.wenzelco.com). Have your model number and part number ready when you call.

**DO NOT ORDER BY REFERENCE KEY NUMBER.**

Send your request for parts to: **American Recreation Products, Inc.**  
1224 Fern Ridge Parkway  
St. Louis, MO 63141-4451

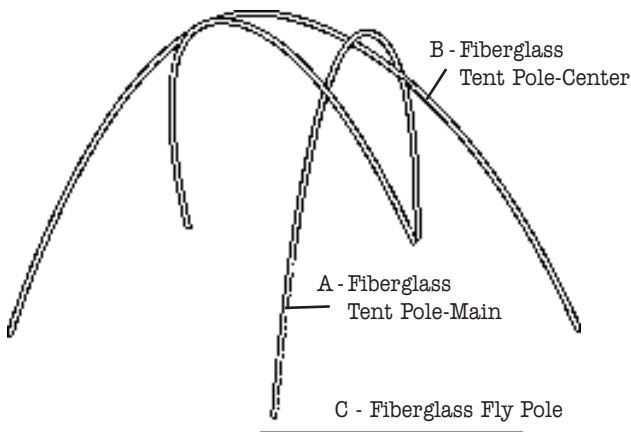

KEY NO.	MODEL NO. 36186, 10'5" x 10'		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Tent Pole-Main	00-0016	2
B	Fiberglass Fly Pole-Center	97-0031	1
C	Fiberglass Fly Pole	02-0012	1
	Complete Frame	36186FR	1
	Replacement Fly	36186FLY	2
	Guy Ropes	A1001	1