

# Model 36167 – Pinewood

## Assembly Instructions

**Important:** We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation. Please look at the replacement parts diagram to see how your frame is assembled.

- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, un-zip the door, prior to tent set up, to allow air to enter the tent.
- To improve the weather resistance of your tent, it is advisable to use a seam sealer to coat all exposed seams. You should apply only to the underside of the fly and inside seams of the tent. If applied to the outside of seams, discoloration of your tent may occur. Seam sealer is available at the camping section of any local sporting goods store.
- For your convenience and improved tent functionality, we have developed a self-contained storm flap pocket. Simply unzip the storm flaps covering the windows and doors and drop into the pocket that has been formed between the bottom of the storm flap and the mesh window.

**Step 1:** Spread tent out flat, floor side down.

**Step 2:** Extent fiberglass frame sections by pulling out each section and placing it into the metal ferrule. The two longer poles are for the tent frame (A). The two shorter poles are for the fly (B).

**Step 3:** Slide each fiberglass tent pole (A) through the sleeves on the top of the roof. Lay the fiberglass frame sections across the tent forming an “X”. Straighten the sleeves along the fiberglass frame pole sections.

**Step 4:** Starting at the back corners of the tent, insert pins located at each corner into the ferrules at the ends of the fiberglass frame sections. To raise tent, repeat the same procedure at the front corners. With a person at each fund corner of the tent, flex fiberglass pole into an upward position, forming two arches.


**Note:** As poles are raised, make sure metal ferrules do not catch on the sleeves.

**Step 5:** Clip plastic hooks to the fiberglass frame sections.

**Step 6:** Locate the fabric ties attached to the center of the tent roof and tie around the fiberglass sections.

**Step 7:** Insert the tent stakes through the stake loops located at each corner of the tent. Stake down tent by hammering stakes into ground at a 45-degree angle, by using a hammer or mallet. Make sure to pull tent out even and tight. Continue to stake down tent with the intermediate stake loops and remaining stakes.

**Step 8:** Unfold the fly and stretch out all corners. Place fly over tent and attach hooks on the fly corners to the loops sewn to the side walls of the tent. Fasten the self-fasteners at each corner of the fly to the fiberglass frame.

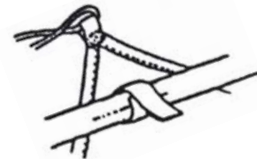


**Step 9:** Insert one of the fly poles (B) into the sleeve found at the very edge of the fly awning over the front door. Carefully flex the fiberglass fly pole and insert each of the metal, bullet-point ends into the reinforced metal grommets located on either side of the front door. Repeat this step with the remaining fly pole and the fly awning over the rear tent window.

Tent should appear as shown:



**Note:** To take tent down, follow steps about and the reverse order. Be sure to leave door and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of the tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door and allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag.

Make sure tent is clean and dry before storing.

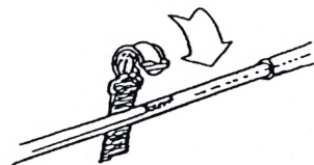

# Safety And Care Instructions

## Warning!

**Keep all flame and heat sources away from this tent fabric!** This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

### Danger:

Stoves, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

### DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

### Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

### Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.




## Replacement Parts

If you have any questions or need to order a part, call 1-800-325-8368 or log into our website at [www.camping-n-gear.com](http://www.camping-n-gear.com) Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER

Send your request for parts to: **The Wenzel Company**  
113 Industrial Drive  
New Haven, MO 63068

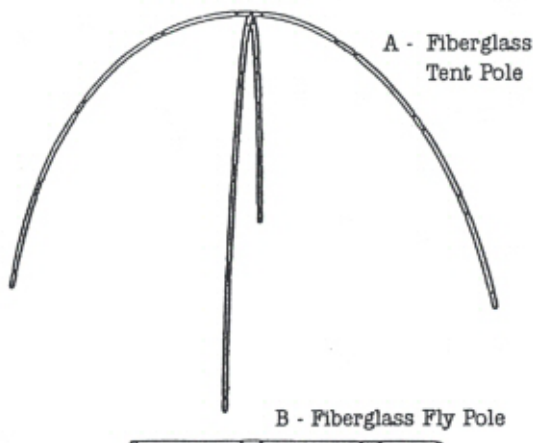

Key #	Model No. 36167		Qty. Req.
	Description	Part Number	
A	Fiberglass tent pole	99-0021	2
B	Fiberglass fly pole	03-0007	2
	Complete frame	36167FR	1
	Replacement fly	36167FLY	1
	Stakes	Pin Stake	7