

MODEL 36083 - PUEBLO

ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SET UP.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

To prolong the life of the tent floor, select a level, clean area for the campsite.

 
To prevent damage to the zipper, unzip the doors to allow air to enter the tent.

STEP 1: Spread tent out flat, floor side down. Unzip doors.



STEP 2: Extend the fiberglass frame poles by pulling out each section and placing it into the metal ferrules. You will have five frame poles. The two longest pole sections (Key A) are the main tent poles. The two remaining, longer pole sections (Key B) are the side poles. The shortest pole, which has a ferrule on one end and a plastic end cap on the opposite end, (Key C) is the center frame pole.

STEP 3: Slide each main fiberglass tent pole section (Key A) into the sleeves located on the roof of the tent. Straighten and adjust sleeves along the frame poles to avoid catching or tearing them. Match sleeves opposite each other to keep them straight. Position poles so they form an "X" across the tent.

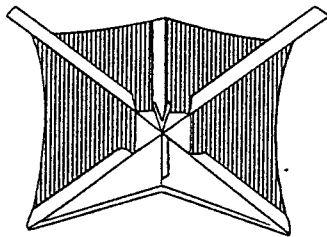

STEP 4: Working from the back of the tent, take the end of the center frame pole with the plastic end cap and insert it into the sleeve at the center roof of the tent and into the sleeve pocket at the center front of the tent. Make certain the end of the center pole is inserted to the very end of the front sleeve pocket.

 
STEP 5: One person should now go into the front door of the tent and gently lift the roof of the tent and the front tent poles up off the ground. The other person should carefully flex the tent poles, one at a time, and insert the pins located at the rear base of the tent into the ferrules at the end of the poles, starting with the center pole and then moving to the two main room poles.



NOTE: These pin and ring frame attachments will have double pins. One set is to be used for the side fiberglass poles.

STEP 6: With one person still lifting the front of the tent and the poles up off the ground, the other person should come around to the front of the tent and flex one of

the main fiberglass tent poles, placing the free end over the metal pins at the front, base of the tent. Repeat with the other main fiberglass pole. Clip plastic hooks to the fiberglass frame sections

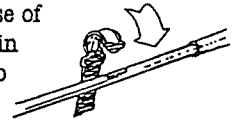


STEP 7: Tie the three poles into place with the fabric tie located at the center tent roof.

STEP 8: To assemble side rooms, locate the remaining side fiberglass poles (Key B). Insert one of the pole sections through pole sleeve on side roof of the tent. Flex the fiberglass poles and insert pins at the base of tent into the ferrules at the ends of the fiberglass pole sections. Repeat the same procedure for the remaining side pole. Clip tent to frame.

STEP 9: Stake down tent by inserting the stakes through the webbing stake loops and through the metal O-rings at the base of the tent. Hammer stakes into ground at a 45° angle using a hammer or mallet, making sure the tent is pulled out even and tight.

STEP 10: Place the fly over tent. Attach hooks on the fly to the loops located on the center roof of the tent and the side tent walls.

 Tent should appear as shown.

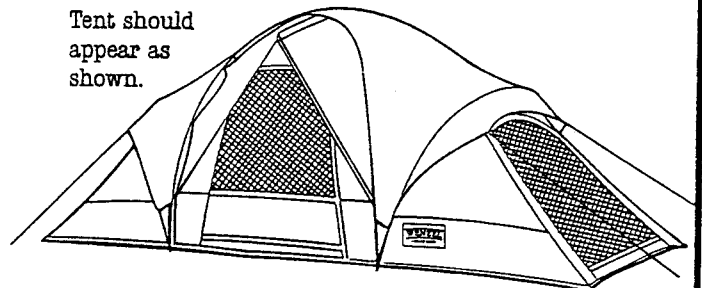

Divider curtains are included which can be used to divide your tent into separate rooms for privacy. Simply attach to the loops located at the center and side walls, inside your tent. Also, convenience pockets are provided for storing small camping gear.

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave doors and windows unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, secure with strings or rope. Slide tent and stake bag into carry bag. Make sure tent is clean and dry before storing.

SAFETY AND CARE WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

 


REPLACEMENT PARTS

If you have questions or need to order to a part, call 1-800-325-TENT or log into our website at www.wenzel.com. Have your model number and part number ready when you call.

DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to: **The Wenzel Company**
502 Orchard Street
New Haven, MO 63068

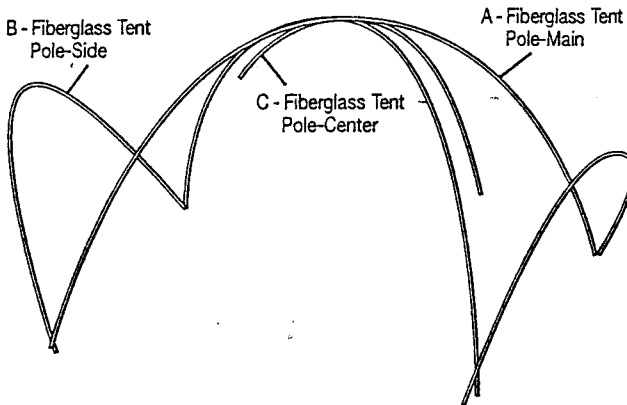

KEY NO.	MODEL NO. 36083		QTY. REQ
	DESCRIPTION	PART NO.	
A	Fiberglass Tent Pole Section	00-0058	2
B	Fiberglass Tent Pole - Side	02-0043	2
C	Fiberglass Tent Pole - Center	02-0044	1
	Complete Frame	36083FR	1
	Replacement Fly	36083FLY	1