

Model 36159 – Retreat


Assembly Instructions

Important: We advise you to assemble the tent once before you go camping to become familiar with the assembly of the tent. For this model, it is recommended that two people be involved with the set up operation. Please look at the replacement parts diagram to see how your frame is assembled.


Note: Choose a level surface to set up your screen gazebo.

Step 1: Extend each of the chain courted poles and separate the frame poles by number. Refer to the frame drawing on page two to see how your frame is assembled.


Step 2: Locate the four poles labeled #2 and the plastic center hub. Insert one and at each of the #2 poles into the plastic center hub.

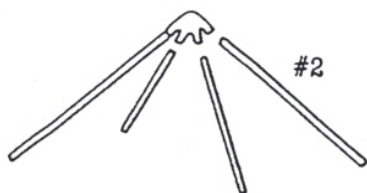

Step 3: The next step is to locate the four poles, which are labeled #3. Using the four plastic cornered joints, assemble the rich poles to the roof poles as shown.

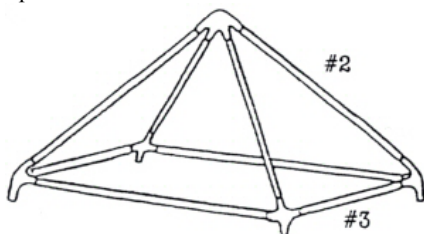

Step 4: Locate the floor side uprights poles, which are labeled #4. Insert the end of the upright pole with the Clip lock into the plastic corner joint. Do not extend the side uprights completely, but leave them bent at the joints closest to the ground. Repeat this step with the three remaining side uprights poles.

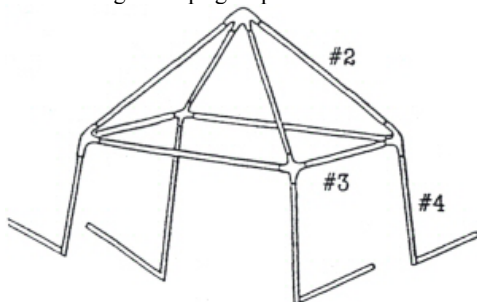

Step 5: With the help of another person, place the screen gazebo over the frame. Stretch screen gazebo, over each plastic corner joint.




Step 6: Now the side uprights poles can be extended, making your frame complete the assembled and an upright position.

Step 7: Attach the screen gazebo to the pole by inserting the hooks into the drilled holes at the bottom of the side uprights, adjusting screen as desired.




Step 8: Stake screen gazebo down by inserting stakes through the loops at each of the screen gazebo corners and Hammer stakes into ground at a 45-degree angle, using a hammer or mallet.

Step 9: There are guy loops located on each of the screen gazebo corners. Attach guy ropes to each of these loops. Make a loop at the opposite end of the guy rope by using slider and place loop over tent stake. Adjust to make guy rope tight and stake to ground.

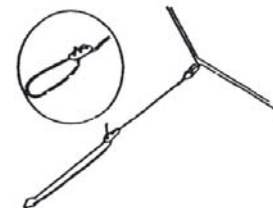

Screen gazebo should appear as shown.

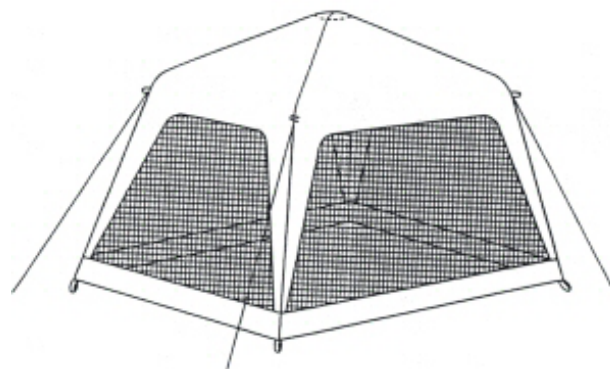

Note: To take down tent, follow the above steps in the reverse order. Be sure to leave doors unzipped. Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Fold fly and lay it on top of tent. Start a small tight roll, the width of your carry bag, with the pole bag placed at the end opposite the door. Roll tent toward door to allow air to escape. Once rolled, tie string around tent and slide into carry bag. Make sure tent is clean and dry before storing.

Safety And Care Instructions

Warning!

Keep all flame and heat sources away from this tent fabric! This tent is made with flame resistant fabric, which meets CPAI-84 specifications. **It is not fireproof.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Danger:

Stoves, lanterns candles, grills heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

DO NOT ...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended
3. Do not leave children unattended inside a tent
4. Do not use heating, lighting or cooking equipment with open flames in or near tents
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.

Do ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

Do not leave your tent set up in direct sunlight longer than necessary.

The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in the sunlight for prolonged periods of time, fabric will fade and weaken. **Do not store tent on concrete floor.**

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

Although our tents and screen houses are constructed to ridged specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.




Replacement Parts

If you have any questions or need to order a part, call 1-800-325-8368 or log into our website at www.camping-n-gear.com Please have your model number and part number available.

DO NOT ORDER BY REFERENCE KEY NUMBER

Send your request for parts to: **The Wenzel Company**
113 Industrial Drive
New Haven, MO 63068

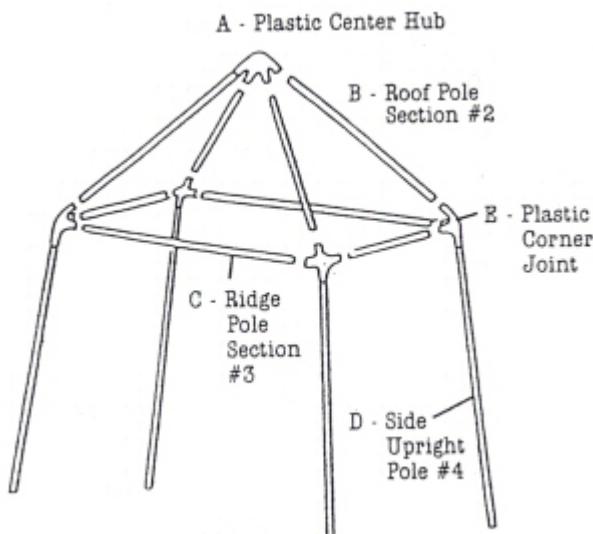

Key Number	Model No. 36159		Qty. Req.
	Description	Part Number	
A	Plastic center hub	02-0109	1
B	Roof pole section #2	02-0110	4
C	Ridge pole section #3	02-0111	4
D	Side upright poles #4	02-0112	4
E	Plastic corner joint	02-0113	4
	Complete frame	36106FR	1
	Guy ropes	A1001	4
	Metal stakes	Pin Stake	8