

MODEL 35926 - SUNDANCE II

ASSEMBLY INSTRUCTIONS


IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. FOR THIS MODEL, IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETTING UP THIS TENT.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

- To prolong the life of the tent floor, select a level, clean area for the campsite.
- To prevent damage to the zipper, unzip the doors and window flaps to allow air to enter the tent.

STEP 1: Spread fly of tent out on the ground so the underside of the fly is facing up.

STEP 2: Locate the two fiberglass fly pole sections. Each pole section is shock corded together. Extend each section. Insert the ends of one of the fiberglass poles into the pockets located at the sides of the fly. Insert the ends of the remaining fiberglass pole into the pockets located at the front and rear of the fly.

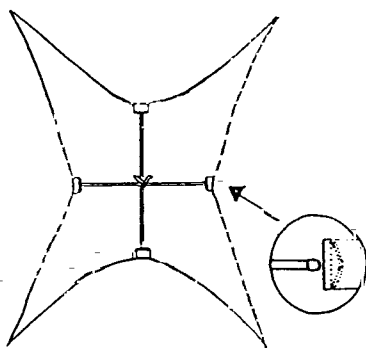

STEP 3: Each of the ridge poles of the tent consists of four metal sections chain corded together. Carefully, extend each of the sections by joining them together at the swages to form each section into the shape of an arc. Slide each section through the sleeves on the fly.



STEP 4: Using ties located in the center of fly, tie the fiberglass and metal poles into place.

STEP 5: Locate the four metal pole sections. Extend each section. While leaving fly on the ground, join the bent end of the metal section to one end of the metal ridge pole sections, which were inserted into the fly sleeves. Repeat for the remaining three pole uprights.

STEP 6: Secure fly to frame by fastening the self-fasteners on the fly around the metal frame.


STEP 7: With the help of another person, flip fly over so it is upright. Attach the "J" hooks on the corners of the fly into the open ends of the metal uprights. Adjust tension as necessary.

STEP 8: Lay tent out under the fly with the roof side up. Unzip doors. Standing on the floor of the tent, hook the center hook of the tent to the tent frame and work your way out to the corners of the tent, clipping tent hooks around the frame.

STEP 9: Insert the pins attached at each corner of the tent into the open ends of each frame pole.

STEP 10: Stake down tent by inserting a stake through the webbing loop at each fly corner and each intermediate stake loop on the tent. Hammer stakes into the ground at a 45° angle, by using a hammer or mallet. Make sure to pull tent out even and tight.

Tent should appear as shown.

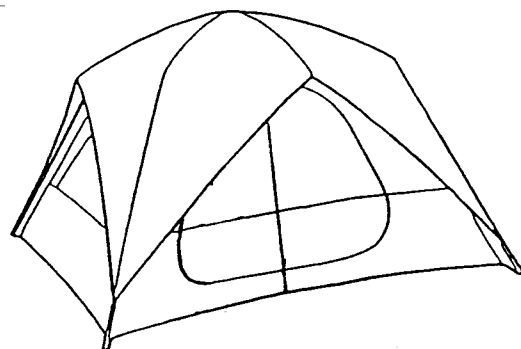

STEP 11: Guy ropes are provided for windy conditions. Tie guy rope to the loop located at each upper corner of the fly and stake down with a loop made with the slider. Adjust sliders as necessary.

Your tent includes a divider curtain which can be tied into the center of your tent to divide the tent into two rooms.

NOTE: If you choose to use your tent fly as a canopy only, you may do so by omitting Steps 8 and 9. Stake down fly corners and guy out the fly for extra stability.

Convenience pockets are provided for storing small camping gear.

NOTE: To take down tent, follow above steps in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag, which is provided.

Fold fly and place on top of tent. Fold tent into thirds lengthwise toward the door. At opposite end of the doors, start a small, tight roll and roll toward the doors. Once rolled, tie a string or rope around tent to hold into place. Slide the tent, frame and stakes into carry bag. Make sure tent is clean and dry before storing.

SAFETY AND CARE

WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT . . .

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO . . .

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.


Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



REPLACEMENT PARTS

IF YOU HAVE QUESTIONS OR NEED TO ORDER A PART, CALL 1-800-325-TENT. HAVE YOUR MODEL NUMBER AND PART NUMBER READY WHEN YOU CALL. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

SEND YOUR REQUEST FOR PARTS TO: THE WENZEL COMPANY
113 INDUSTRIAL DRIVE
NEW HAVEN, MO 63068

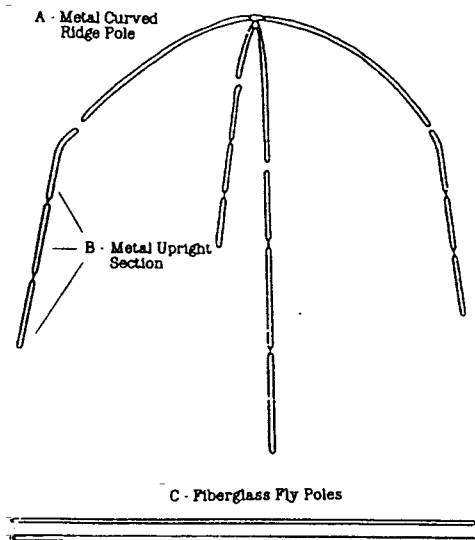

KEY NO.	DESCRIPTION	MODEL NO. 35926	QTY. REQ.
		PART NO.	
A	METAL CURVED RIDGE POLE	99-2006B	2
B	METAL UPRIGHT SECTION	99-2006B	4
C	FIBERGLASS FLY POLE	99-0026	2
	COMPLETE FRAME	53592500	1