

MODEL 35915 - ZION

 
ASSEMBLY INSTRUCTIONS

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT. FOR THIS MODEL, IT IS RECOMMENDED TWO PEOPLE BE INVOLVED IN SETTING UP THIS TENT.

NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.


To prolong the life of the tent floor, select a level, clean area for the campsite.
To prevent damage to the zipper, unzip the doors to allow air to enter the tent.

- STEP 1:** Separate frame poles. Extend the frame pole sections which are chaincorded together.
- STEP 2:** Locate the four frame pole sections labeled #1. One of these poles has a plastic hub. This is the center hub of the frame. Insert the 3 remaining poles into this hub. Make sure the clip locks on the poles snap into the slots on the plastic center hub.
- STEP 3:** Locate the four single poles with plastic hubs marked #3. These are the side upright poles. Insert the open end of the poles marked #1 into the center opening of pole #3. Again, make certain the clip locks snap into the slots on the plastic joints. Do not extend the side uprights completely, but leave them bent at the joints closest to the ground.
- STEP 4:** Locate the four remaining poles marked #2. They have a clip lock on each end. Starting with one corner, insert one end into the plastic corner joints. Make sure the clip locks on the poles snap into the slots on the plastic joints. Repeat this procedure for the remaining three corners. Your frame should appear as shown below.

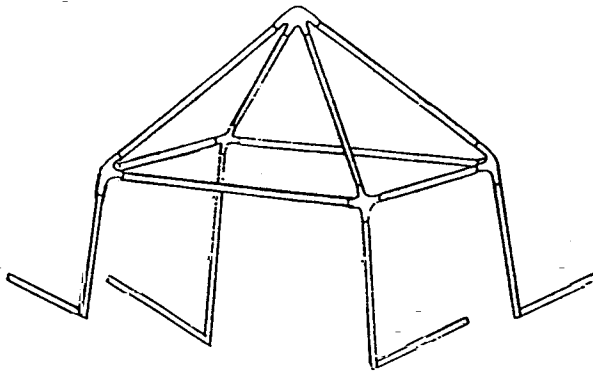

- STEP 9:** Insert the pin attached at each corner of the tent into the open end of each frame pole.
- Locate the frame ties at each side corner of the tent and tie to frame.
- STEP 10:** Attach the metal hook on each corner of the fly into the open end of each frame pole, doing opposite sides at the same time. Use the buckles on the ends of the fly to adjust the tension.
- STEP 11:** Stake down tent by inserting a tent stake through the stake loop at each corner, and through the stake loops located at the base of the tent. Hammer stakes into ground at a 45° angle, by using a hammer or mallet. Make sure to pull the tent out even and tight.

 Tent should appear as shown.

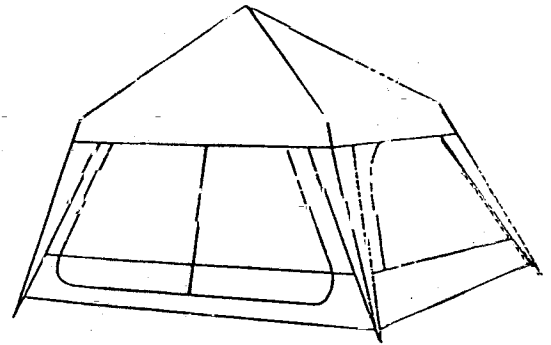

- STEP 5:** Lay tent out flat under the tent frame with the roof side up. Unzip doors.
- STEP 6:** Locate the metal "s" hooks attached at each corner and the center of the tent. Starting at the center, insert hook through hole in the plastic joint at the center hub of the frame. Repeat same procedure for each corner of the tent. Clip the plastic hooks located on each eave of the tent to the ridge poles of the frame.
- STEP 7:** With the help of another person, place fly over tent, seams should be on the underside of fly. Stretch fly out tightly.
- STEP 8:** Now the side upright poles can be extended, making your frame completely assembled and in an upright position.

NOTE: If you choose to use your tent fly as a canopy only, you may do so by omitting steps 5, 6 and 9. Proceed to place fly over tent frame. Seams should be on the underside of the fly. Stretch out tightly over frame. Extend side upright poles and attach fly. Stake down fly by inserting stakes through stake loops located at each corner of the fly. Hammer stakes into ground at a 45° angle, using a hammer or mallet.

NOTE: A curtain has been included for dividing your tent into two rooms. Locate the ties attached to curtain and tie to tent.

For your convenience, there are hanger loops located inside your tent. These can be used to hang small camping items.

Also, convenience pockets are provided for storing small camping gear.

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave tent unzipped. Place stakes into stake bag, which is provided.

To roll tent up, fold into thirds lengthwise toward the door. At opposite end of the door, start a small, tight roll and roll toward the door. Once rolled, tie a string or rope around tent to hold into place. Slide tent, frame and stakes into carry bag. Make sure tent is clean and dry before storing.

SAFETY AND CARE

WARNING!

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIREPROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Never use fuel burning, oxygen consuming devices (i.e. heaters, lanterns, cooking stoves or other flame sources) inside your tent.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

 
Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.



REPLACEMENT PARTS

IF YOU HAVE QUESTIONS OR NEED TO ORDER A PART, CALL 1-800-325-TENT. HAVE YOUR MODEL NUMBER AND PART NUMBER READY WHEN YOU CALL. **DO NOT ORDER BY REFERENCE KEY NUMBER.**

SEND YOUR REQUEST FOR PARTS TO: THE WENZEL COMPANY
113 INDUSTRIAL DRIVE
NEW HAVEN, MO 63068

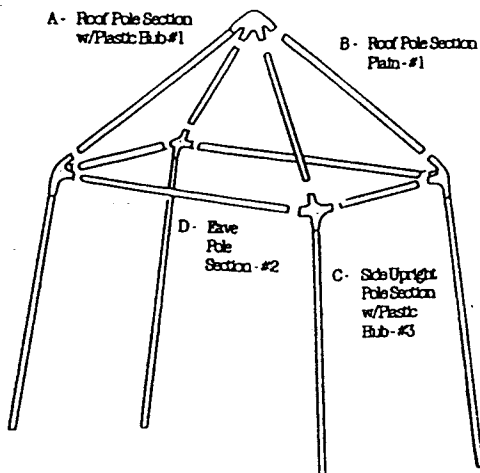

KEY NO.	DESCRIPTION	MODEL NO.	QTY. REQ.
		35915 PART NO.	
A	ROOF POLE SECTION W/PLASTIC JOINT - #1	98-0018B	1
B	ROOF POLE SECTION PLAIN - #1	98-0019B	3
C	SIDE UPRIGHT POLE SECTION W/PLASTIC HUB - #3	98-0020B	4
D	EAVE POLE SECTION - #2	98-0021B	4
	COMPLETE FRAME	53583200BS	1